

# ACCESSORIES - Locating Ring for Plummer Blocks

## Locating Ring for Plummer Blocks

Accessories	Part No.	Qty.
Locating Ring for Housings	BPT_SR62*10	2
Locating Ring for Housings	BPT_SR62*6	4
Locating Ring for Housings	BPT_SR62*7	4
Locating Ring for Housings	BPT_SR62*8	6
Locating Ring for Housings	BPT_SR72*10	2
Locating Ring for Housings	BPT_SR72*5.5	4
Locating Ring for Housings	BPT_SR72*8	6
Locating Ring for Housings	BPT_SR72*8.5	6
Locating Ring for Housings	BPT_SR80*10	2
Locating Ring for Housings	BPT_SR80*10.5	4
Locating Ring for Housings	BPT_SR80*7.5	4
Locating Ring for Housings	BPT_SR80*8	4
Locating Ring for Housings	BPT_SR85*5.5	4
Locating Ring for Housings	BPT_SR85*6	4
Locating Ring for Housings	BPT_SR85*7	2
Locating Ring for Housings	BPT_SR85*8	2
Locating Ring for Housings	BPT_SR90*10	2
Locating Ring for Housings	BPT_SR90*10.5	4
Locating Ring for Housings	BPT_SR90*6.5	4
Locating Ring for Housings	BPT_SR90*9	4



## Locating Ring for Plummer Blocks

Accessories	Part No.	Qty.
Locating Ring for Housings	BPT_SR100*11.5	4
Locating Ring for Housings	BPT_SR100*6	4
Locating Ring for Housings	BPT_SR100*8	2
Locating Ring for Housings	BPT_SR100*9.5	4
Locating Ring for Housings	BPT_SR110*10	6
Locating Ring for Housings	BPT_SR110*13	4
Locating Ring for Housings	BPT_SR110*8	4
Locating Ring for Housings	BPT_SR120*10	8
Locating Ring for Housings	BPT_SR120*12	2
Locating Ring for Housings	BPT_SR120*14	4
Locating Ring for Housings	BPT_SR130*10	2
Locating Ring for Housings	BPT_SR130*12.5	4
Locating Ring for Housings	BPT_SR130*15.5	4
Locating Ring for Housings	BPT_SR130*8	4
Locating Ring for Housings	BPT_SR140*10	2
Locating Ring for Housings	BPT_SR140*12.5	4
Locating Ring for Housings	BPT_SR140*16	2
Locating Ring for Housings	BPT_SR140*8.5	2
Locating Ring for Housings	BPT_SR150*10	2
Locating Ring for Housings	BPT_SR150*12.5	4
Locating Ring for Housings	BPT_SR150*16.5	2
Locating Ring for Housings	BPT_SR150*9	2
Locating Ring for Housings	BPT_SR160*16.2	2
Locating Ring for Housings	BPT_SR160*17.5	2
Locating Ring for Housings	BPT_SR170*10	2
Locating Ring for Housings	BPT_SR170*10.5	2
Locating Ring for Housings	BPT_SR170*12.5	4
Locating Ring for Housings	BPT_SR170*18	2
Locating Ring for Housings	BPT_SR180*12	4
Locating Ring for Housings	BPT_SR180*12.1	4
Locating Ring for Housings	BPT_SR200*13.5	8
Locating Ring for Housings	BPT_SR215*14	4
Locating Ring for Housings	BPT_SR230*13	4
Locating Ring for Housings	BPT_SR250*15	4
Locating Ring for Housings	BPT_SR270*16.5	4